# Customizable features

Your vehicle includes a variety of electronic features that can be personalized to suit your preferences. Programming of these preferences can be performed by your Lexus dealer.

It is also possible to customize certain vehicle features yourself using the multi-information switches, the navigation system screen or the Display Audio system screen.

Some function settings are changed simultaneously with other functions being customized. Contact your Lexus dealer for further details.

## Customizing vehicle features

It is possible to customize certain vehicle features using the multi-information switches. *

*: For instructions on customizing vehicle features using the navigation system screen, refer to the "Navigation System Owner's Manual".

For instructions on customizing vehicle features using the Display Audio system screen: →P. 406

When customizing vehicle features, ensure that the vehicle is parked in a safe place with the shift lever in P and the parking brake set.

Press and hold the menu switch of the multi-information switches to display customize mode.
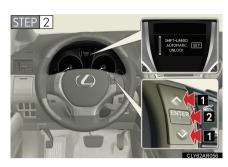
1. Press the "∧" or "∨" switch to select the item to be customized.
2. Press the "ENTER" switch to confirm.

1. Press the "∧" or "∨" switch to select the desired setting for the item being customized.
2. Press the "ENTER" switch to confirm.

When customization is completed, press the menu switch to clear the customization screen.

## Customizable Features

1 Vehicles with a Display Audio system: Settings that can be changed using the Display Audio system

2 Vehicles with a Display Audio system: Settings that can be changed using the multi-information switches

3 Vehicles with a navigation system: Settings that can be changed using the screen of the navigation system

4 Vehicles with a navigation system: Settings that can be changed using the multi-information switches

5 Vehicles without a Display Audio system and navigation system: Settings that can be changed using the multi-information switches

6 Settings that can be changed by your Lexus dealer

Definition of symbols: O = Available, — = Not available

▶ Door lock (→P. 79, 918)

| Function | Default setting | Custom-ized setting | 1 | 2 | 3 | 4 | 5 | 6 |
|---|---|---|---|---|---|---|---|---|
| Unlocking using a key | Driver's door unlocked in one step, all doors unlocked in two steps | All doors unlocked in one step | – | – | O | – | – | O |
| Speed-detecting automatic door lock function | Off | On | O | – | O | – | O | O |
| Shifting gears to position other than P locks all doors | On | Off | O | – | O | – | O | O |
| Shifting gears to P unlocks all doors | On | Off | O | – | O | – | O | O |
| Opening driver's door unlocks all doors | Off | On | O | – | O | – | O | O |

▶ Smart access system with push-button start and wireless remote control (→P. 62, 76)

| Function | Default setting | Custom-ized setting | 1 | 2 | 3 | 4 | 5 | 6 |
|---|---|---|---|---|---|---|---|---|
| Operation buzzer volume | Level 7 | Off to level 6 | O | – | O | – | O | O |
| Operation signal (buzzer) | On | Off | O | – | O | – | O | O |
| Operation signal (emergency flash-ers) | On | Off | O | – | O | – | O | O |
| Open door warning buzzer | On | Off | – | – | – | – | – | O |
| Time elapsed before the automatic door lock function is acti-vated if a door is not opened after being unlocked | 60 sec-onds | Off | O | – | O | – | O | O |
| | | 30 sec-onds | | | | | | |
| | | 120 sec-onds | | | | | | |
| Smart door unlock-ing | Driver's door | All the doors | O | – | O | – | O | O |
| Smart access sys-tem with push-but-ton start | On | Off | O | – | O | – | O | O |

▶ Power back door (→P. 82)

| Function | Default setting | Customized setting | 1 | 2 | 3 | 4 | 5 | 6 |
|---|---|---|---|---|---|---|---|---|
| Power back door opening operation using the back door opener button | Off | On | – | – | – | – | – | O |

▶ Wireless remote control (→P. 76)

| Function | Default setting | Customized setting | 1 | 2 | 3 | 4 | 5 | 6 |
|---|---|---|---|---|---|---|---|---|
| Unlocking operation | Driver's door unlocked in one step, all doors unlocked in two steps | All doors unlocked in one step | O | – | O | – | O | O |
| Panic function | On | Off | – | – | – | – | – | O |

▶ Automatic light control system (→P. 274)

| Function | Default setting | Customized setting | 1 | 2 | 3 | 4 | 5 | 6 |
|---|---|---|---|---|---|---|---|---|
| Time elapsed before the headlights turn off | 30 seconds | Off<br>60 seconds<br>90 seconds | O | – | O | – | O | O |
| Light sensor sensitivity | Standard | -2 to 2 | O | – | O | – | O | O |
| Light reminder buzzer | On | Off | – | – | – | – | – | O |
| Daytime running light system (except for Canada) | On | Off | O | – | O | – | O | O |

▶ Illumination(→P. 667)

| Function | Default setting | Customized setting | 1 | 2 | 3 | 4 | 5 | 6 |
|---|---|---|---|---|---|---|---|---|
| Time elapsed before the interior lights turn off | 15 seconds | 7.5 seconds<br>30 seconds | O | – | O | – | O | O |
| Time elapsed before the exterior lights turn off | 15 seconds | 7.5 seconds<br>30 seconds | O | – | O | – | O | O |
| Operation when the doors are unlocked | On | Off | – | – | – | – | – | O |
| Operation after the "ENGINE START STOP" switch (RX350) or "POWER" switch (RX450h) turned off | On | Off | – | – | – | – | – | O |
| Operation when you approach the vehicle with the electronic key on your person | On | Off | – | – | – | – | – | O |
| Wireless remote control linked exterior lights when the surrounding area is dark | On | Off | – | – | – | – | – | O |

| Function | Default setting | Custom-ized setting | 1 | 2 | 3 | 4 | 5 | 6 |
|---|---|---|---|---|---|---|---|---|
| Sensitivity of the ambient light sensor used for dimming the meter lights etc. | Standard | -2 to 2 | O | – | O | – | – | O |
| Sensitivity of the ambient light sensor used for brighten-ing the meter lights etc. | Standard | -2 to 2 | O | – | O | – | – | O |
| Interior light control | On | Off | O | – | O | – | O | O |
| Exterior light control | On | Off | O | – | O | – | O | O |
| Shift lever lights | On | Off | – | – | – | – | – | O |

▶ Seat belt reminder (→P. 861)

| Function | Default setting | Custom-ized setting | 1 | 2 | 3 | 4 | 5 | 6 |
|---|---|---|---|---|---|---|---|---|
| Vehicle speed linked seat belt reminder buzzer | On | Off | – | – | – | – | – | O |

▶ Automatic air conditioning system (→P. 412, 421)

| Function | Default setting | Custom-ized setting | 1 | 2 | 3 | 4 | 5 | 6 |
|---|---|---|---|---|---|---|---|---|
| A/C auto switch operation | Auto | Manual | O | – | O | – | – | O |
| Exhaust gas sensor sensitivity | Standard | -3 to 3 | O | – | O | – | – | O |

▶ Driving position memory (→P. 103)

| Function | Default setting | Customized setting | 1 | 2 | 3 | 4 | 5 | 6 |
|---|---|---|---|---|---|---|---|---|
| Driver's seat movement when exiting the vehicle (on some models) | Full | Off<br>Partial | O | – | O | – | O | O |
| Selecting whether the driver's door or all doors are linked to the power easy access system | Driver's door | All the doors | – | – | – | – | – | O |

▶ Meter (→P. 195, 247)

| Function | Default setting | Custom-ized setting | 1 | 2 | 3 | 4 | 5 | 6 |
|---|---|---|---|---|---|---|---|---|
| Eco Driving Indica-tor Light (RX350) | On | Off | – | O | – | O | O | O |
| ECO lamp (RX450h) | On (Turns on/ off accord-ing to driv-ing conditions) | On (Stays on) | – | O | – | O | O | O |
| | | Off (Stays off) | | | | | | |
| SPORT lamp (RX450h) | On | Off | – | O | – | O | O | O |

▶ Power windows (→P. 129)

| Function | Default setting | Custom-ized setting | 1 | 2 | 3 | 4 | 5 | 6 |
|---|---|---|---|---|---|---|---|---|
| Mechanical key linked operation | On | Off | – | – | – | – | – | O |
| Wireless remote control linked open-ing | On | Off | – | – | – | – | – | O |
| Wireless remote control linked open-ing buzzer | On | Off | – | – | – | – | – | O |

▶ Moon roof (→P. 133)

| Function | Default setting | Custom-ized setting | 1 | 2 | 3 | 4 | 5 | 6 |
|---|---|---|---|---|---|---|---|---|
| Mechanical key linked operation | On | Off | – | – | – | – | – | O |
| Wireless remote control linked open-ing | On | Off | – | – | – | – | – | O |
| Linked operation of components when door key is used | Slide only | Tilt only | – | – | – | – | – | O |
| Linked operation of components when wireless remote control is used | Slide only | Tilt only | – | – | – | – | – | O |

▶ Intuitive parking assist (→P. 309)

| Function | Default setting | Custom-ized setting | 1 | 2 | 3 | 4 | 5 | 6 |
|---|---|---|---|---|---|---|---|---|
| Buzzer volume | 3 | 1 to 5 | O | – | O | – | – | O |
| Detection distance of the front center sensors | Far | Near | O | – | O | – | – | O |
| Detection distance of the rear center sensors | Far | Near | O | – | O | – | – | O |
| Display setting (when intuitive parking assist is operating) | All sensors displayed | No sensors displayed | O | – | O | – | – | O |

## Multi-information display (→P. 260)

Settings that can be changed using the multi-information switches

| Available languages | English, French and Spanish |
| --- | --- |
| Available units | miles (MPG), km (km/L), km (L/100 km) |

**In the following situations, customize mode will automatically be turned off.**

- A warning message appears after the customize mode screen is displayed.
- RX350: The "ENGINE START STOP" switch is turned off.
- RX450h: The "POWER" switch is turned off.
- The vehicle begins to move while the customize mode screen is displayed.

### CAUTION

**Cautions during customization**

▶ RX350

As the engine needs to be running during customization, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

▶ RX450h

As the hybrid system needs to be operating during customization, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

NOTICE

■ **During customization**

▶ RX350

To prevent 12-volt battery discharge, ensure that the engine is running while customizing features.

▶ RX450h

To prevent 12-volt battery discharge, ensure that the hybrid system is operating while customizing features.